

品质至上 品牌专营

輝門(香港)國際有限公司
服务热线: 400 6090 369



<p>fei menl mugol</p>	<p>fei menl mugol</p>	<p>fei menl mugol</p>
<p>8-94437397-FT 缸体 OLD CYLINDER BLOCK 4JB1</p>	<p>8-94437397-FTT 缸体 NEW CYLINDER BLOCK JMC 4JB1 II</p>	<p>8-94431519-GC(8944315202) 缸盖 CYLINDER HEAD 4JA1 4JB1</p>
<p>fei menl mugol</p>	<p>fei menl mugol</p>	<p>fei menl mugol</p>
<p>8-97176685-HP(8971766850) 缸套 CYLINDER LINER 4JB1</p>	<p>8-94433177-DE(8944331770) 活塞(加强) PISOTN 4JB1</p>	<p>8-94433621-DE(8944336210) 活塞(加强)增压210 PISOTN NKR55T</p>
<p>fei menl mugol</p>	<p>fei menl mugol</p>	<p>fei menl mugol</p>
<p>8-94247867-GC(8942478670) 活塞环 PISTON RING 4JB1</p>	<p>8-94332327-ZB(8943323270) 气缸床 GASKET; CYL HEAD NKR 4JB1 4JA1</p>	<p>9-0800071840-PT(9080007180) 偏心轴齿滑键 FEATHER KEY;CRANKSHAFT GEAR NHR NKR</p>
<p>fei menl mugol</p>	<p>fei menl mugol</p>	<p>fei menl mugol</p>
<p>8-94155361-PT(8941553610)时规底板 TIMING PANEL NHR NKR</p>	<p>8-97350320-D(8973503200) 气缸床 GASKET; CYL HEAD 4JB1 4JA1</p>	<p>8-94155360-YH(8941553600) 时规底板盖 COVER;TIMING PANEL NHR NKR</p>
<p>fei menl mugol</p>	<p>fei menl mugol</p>	<p>fei menl mugol</p>
<p>8-97350320-PT(8973503200) 气缸床 GASKET; CYL HEAD JMC II凯运欧II</p>	<p>8-97164773-PT(8971647730) 时规过渡齿 31 IDLE GEAR NKR A</p>	<p>8-97350320-PTT(8973503200) 气缸床 GASKET; CYL HEAD JMC II凯运欧3</p>



 <p>8-94139762-PT(8941397620) 时规过渡齿 37 IDLE GEAR NHR NKR</p>	 <p>9-12521042-PT(9125210420) 曲轴齿 Z=21 GEAR;CRANKSHAFT NHR NKR</p>	 <p>8-94326351-PT(8943263510) 偏心轴齿 GEAR;CAMSHAFT NHR NKR</p>
 <p>8-94326350-PT(8943263500) 高压油泵齿 GEAR;INJECTOR PUMP NHR NKR</p>	 <p>8-94110271-KOYOO (8941102710) 时规轴承 6028 TIMING BEARING NHR4JA1</p>	 <p>8-94139758-PT(8941397580) 时规过渡齿轴(A) SHAFT IDLE GEAR NHR NKR</p>
 <p>8-94109913-PT(8941099130) 时规过渡齿轴(B) SHAFT IDLE GEAR NKR小</p>	 <p>8-94141937-PT(8941419370) 时规过渡齿轴垫片B GASKET;SHAFT IDLE GEAR NHR NKR B</p>	 <p>8-94139757-PT(8941397570) 时规过渡齿轴垫片A GASKET;SHAFT IDLE GEAR NKRA</p>
 <p>8-97160706-PT(8971607060) 时规喷油管 TIMING FUEL INJECTION PIPE NHR</p>	 <p>8-94133275-ZZZ(8941332750) 进气门 INLET VALVE NHR NKR</p>	 <p>8-94247875-ZZZ(8942478750) 排气门 EXHAUST VALVE 600PNKR</p>
 <p>8-97232425-GC(8972324250) 气门座圈(进) VALVE RETAINER NKR</p>	 <p>8-97232426-GC(8972324260) 气门座圈(排) VALVE RETAINER 600PNKR</p>	 <p>8-94250172-PT(8942501720) 曲轴箱通风阀 CRANKCASE VENTILATION VALVE NHR NKR</p>



		
<p>8-94476697-PT(8944766970) 气门室盖(螺纹) VALVE CHAMBER COVER NKR</p>	<p>8-97036199-TY(8970361990) 气门摇臂轴总成 VALVE ROCKER ASSY NHR NKR</p>	<p>8-94152344-PT(8941523440) 气门摇臂 VALVE ROCKER NHR NKR</p>
		
<p>8-94152283-PT(8941522830) 气门调整螺丝 TAPPET ADJUST SCREW NHR NKR</p>	<p>8-97071673-GC(8970716730) 气门推杆 VALVE TAPPET 600PNKR</p>	<p>8-94438305-GC(8944383050) 气门挺杆 VALVE TAPPET 600PNKR</p>
		
<p>8-94252536-GC(8942525360) 气门弹簧(外) VALVE SPRING NHR NKR</p>	<p>8-94133731-GC(8941337310) 气门弹簧座 VALVE SPRING RETAINER NHR NKR</p>	<p>8-97120307-CA(8971203070) 气门油封 川奥 OIL SEAL;VALVE 4JB1 4D22</p>
		
<p>5-11721016-9(5117210160) 气门导管 GUIDE VALVE (INLET) 600PNKR55NKR</p>	<p>8-94247355-GC(8942473550) 缸盖螺丝 SCREW;CYLINDER NHR NKR</p>	<p>T-706-DY(5878127067) 发动机大修包 FULL GASKET SET NKR</p>
		
<p>8-94127797-AHX(8941277970) 偏心轴(新江铃=42MM) CAMSHAFT JMC 4JB1</p>	<p>8-94127797-CAO(8941277970) 偏心轴D=40MM CAMSHAFT 4JB1</p>	<p>C4650-HZ(C4650-HZ) 偏心轴瓦 CAMSHAFT BEARING NKR 4JB1</p>



<p>8-94110480-PT(8941104800) 偏心轴止推垫片 THRUST METAL;CAMSHAFT NKR77</p>	<p>M4651A 0.00-ADS(M4651A STD) 曲轴瓦.00 MAIN BEARING 4JB1</p>	<p>R4650A 0.00-ADS(8943241590) 连杆瓦.00 CON ROD BEARING 4JA1 4JB1</p>
<p>T4651A STD-HZ(T4651A STD0) 曲轴止推片 THRUST METAL;CRANKSHAFT NKR 4JB1</p>	<p>8-94443662-ZB(8944436620) 曲轴 (铸钢) CRANKSHAFT (CASTING) NKR 4JB1</p>	<p>8-94259880-PT(8942598800) 排气歧管 EXHAUST MANIFOLD NHR NKR54.55</p>
<p>8-94139526-PT(8941395260) 排气歧管垫 GASKET;EXHAUST MANIFOLD NHR NKR</p>	<p>8-94109901-PT(8941099010) 进气歧管 INTAKE MANIFOLD NKR NHR</p>	<p>1008012SJ(1008012SJ) 进气歧管 INTAKE MANIFOLD 凯运 欧2</p>
<p>8-94139738-PT(8941397380) 进气歧管垫 GASKET;INTAKE MANIFOLD NHR NKR</p>	<p>51)8-97080194-9(8970801940) 油底壳垫 GASKET;OIL PAN NHRNKR</p>	<p>52)8-97049145-9(8970491450) 曲轴前油封 50689 OIL SEAL FRT ;CRANKSHAFT 4JA1 4JB1</p>
<p>8-97049146-9(8970491460) 曲轴后油封9511810 OIL SEAL FRT ;CRANKSHAFT NHR NKR</p>	<p>8-9712333053-GC(8971233300) 水泵 WATER PUMP 44A1 4JB1</p>	<p>5-97033175-DW(5970331750)OD=28MM 机油泵(新江铃) OIL PUMP JMC 4JB1</p>



 <p>fei menl mugol</p> <p>8-97033175-DW(8970331750) 机油泵(大头)OD=30MM OIL PUMP NHR NKR</p>	 <p>fei menl mugol</p> <p>8-93552121-PT(8935521210) 机油泵油管 OIL PIPE;OIL PUMP NHR NKR</p>	 <p>fei menl mugol</p> <p>8-94133736-PT(8941337360) 油底壳(1009050BB) OIL PAN NHR NKR</p>
 <p>fei menl mugol</p> <p>8-94483683-PT(8944836830) 曲轴皮带轮(三槽) PULLEY CRANKSHAFT TFR54 NKR55</p>	 <p>fei menl mugol</p> <p>5-53221027-PT(5532210270) 发动机支架 R ENGINE SUPPORT;RH NKR 大</p>	 <p>fei menl mugol</p> <p>8-94122051-PT(8941220510) 发动机支架 L ENGINE SUPPORT;LH NHR NKR</p>
 <p>fei menl mugol</p> <p>8-94155653-PT(8941556530) 发动机脚胶 L ENGINE MOUNTING,LH NHR NKR</p>	 <p>fei menl mugol</p> <p>9-51222518-PT(9512225180) 缸体后盖板 BACK PLATE;CYLINDER BLOCK NHR NKR</p>	 <p>fei menl mugol</p> <p>8-92052102-PT(8920521020) 进气接头 INLET CONNECTION NHR NKR</p>
 <p>fei menl mugol</p> <p>8-94125851-GC(8941258510) 节温器座 THERMOSTAT SEAT NHR NKR</p>	 <p>fei menl mugol</p> <p>8-94368589-RA(8943685890) 节温器盖 THERMOSTAT CAP NHR NKR</p>	 <p>fei menl mugol</p> <p>8-97361770-D(8973617700) 节温器(82.C) THERMOSTAT 600PNKR55</p>
 <p>fei menl mugol</p> <p>9-82720209-GC(9827202090) 机油感应器 OIL SENSOR OIL SENSOR</p>	 <p>fei menl mugol</p> <p>1002080BB-TWC(1002080BB0) 机油感应器 插 OIL SENSOR NKR顺达凯运宝典</p>	 <p>fei menl mugol</p> <p>360140001-D(3601400010) 传感器(曲轴位置) SENSOR;CRANKSHAFT TRA凯运顺达凯锐欧3</p>



 <p>8-94361683-NJJ(8943616830) 高压油泵(退货抄号码) INJECTOR PUMP NHR NKR</p>	 <p>1111300CAT(1111300CAT) 高压油泵(博世) INJECTOR PUMP 宝典宝威欧3</p>	 <p>8-94133746-GC(8941337460) 高压油泵油管 OIL PIPE;INJECTOR PUMP NKR</p>
 <p>8-94239372-SL(8942393720) 高压油泵电磁阀(死火) SOLENOID SWITCH NKR</p>	 <p>8-94237392-SL(8942373920) 高压油泵电磁阀(供油) SOLENOID SWITCH NKR</p>	 <p>8-94152353-PT(8941523530) 喷油器软管(短) HOSE;INJECTOR NHR NKR</p>
 <p>8-97147034-9 (8971470340) 高压油泵油封 20317 OIL SEAL;OIL PUMP NKRNHR</p>	 <p>8-94139465-PT(8941394650) 喷油嘴总成 INJECTOR ASSY NHR NKR</p>	 <p>1112100TAR(1112100TAR) 喷油嘴总成 INJECTOR ASSY TRA凯运欧3</p>
 <p>1112100CAT(1112100CAT) 喷油嘴总成(0445110305) INJECTOR ASSY 陆风X6宝典欧3</p>	 <p>DLLA154P001(DLLA154P001) 喷油嘴(001) NOZZLE 凯运J116欧III</p>	 <p>DSLA153P009-P(DSLA153P0090) 喷油嘴(009) NOZZLE 陆风增凯运II</p>
 <p>8-94140115-PT(8941401150) 预热塞 GLOW PLUG 600PNKR55</p>	 <p>8-94133744-PT(8941337440) 缸体进水管(119) INLET PIPE;CYLINDER NHR NKR</p>	 <p>1303050AD-ZY(1303050AD0) 缸体进水管(增压)121 INLET PIPE;CYLINDER 凯运欧2</p>











		
<p>1303050DL-RA(1303050DL0) 缸体进水管 (121) 3管 INLET PIPE;CYLINDER 凯运欧2欧3</p>	<p>8-94340390-PT(8943403900) 上水管 UPPER HOSE NHR NKR</p>	<p>8-94121840-PT(8941218400) 下水管 LOWER HOSE NHR NKR</p>
		
<p>5-85124551-GC(5851245510) 机油滤清器座 OIL FILTER SEAT NHR98</p>	<p>8-94167400-GC(8941674000) 机油滤芯 OIL FILTER ELEMENT NHR 4JA1</p>	<p>8-97049708-CAO(8970497080) 机油滤芯 OIL FILTER ELEMENT NKR94</p>
		
<p>9-88513106-GC(9885131060) 柴油格 OIL FILTER ELEMENT NKR4JB1</p>	<p>89)8-94168520-PT(8941685200) 柴油格座 COVER;FUEL FILTER NKR</p>	<p>90)5-87310335-CA(5873103350) 柴油格 FUEL FILTER NKR NPR</p>
		
<p>8-94327272-PT(8943272720) 机油滤清器总成 OIL FILTER ASSY 凯运J116增压欧2</p>	<p>8-94442156-PT(8944421560) 机油滤清器总成 OIL FILTER ASSY JMC凯运宝典奥</p>	<p>8-94438354-D(8944383540) 机油散热器 OIL COOLER 宝典陆风全顺</p>
		
<p>8-94154754-GC(8941547540) 油水分离器 OIL-WATER SEPARATOR NHR NKR</p>	<p>100500011-GC(1005000110) 柴油格(3管) FUEL FILTER 凯运欧3</p>	<p>471169-5002-SH(471169-50020) 蜗轮增压器(轴松不保) TURBO CHARGER 凯运J116底4孔</p>



 <p>736210-5009-SH(736210-50090) 蜗轮增压器(轴心不保) TURBO CHARGER 凯运J116欧3</p>	 <p>8-94174839-GC(8941748390) 泵芯(左)0920 FUEL PUMP PLUNGER NKR</p>	 <p>8-94174749-9(894174749-9) 泵芯(右)0820 FUEL PUMP PLUNGER NHKR</p>
 <p>8-94122488-SH(8941224880) 发电机 3P 12V60A ALTERNATOR NKR4JB1</p>	 <p>3-38528628-SH(3385286280) 发电机(宝典)60A 4P ALTERNATOR TFR.JMC</p>	 <p>8-94244178-SH(8942441780) 发电机80A 4P ALTERNATOR 凯运J116</p>
 <p>8-94448959-SHH(8944489590) 起动机总成2.8kw STARTER ASM NKRTFR54</p>	 <p>8-94458959-SH(8944589590) 起动机总成2.0kw STARTER ASM NKR</p>	 <p>5-81124003-G(5811240030) 起动机齿 STARTER GEAR NHR NKR</p>
 <p>8-94129187-PT(8941291870) 起动机齿 STARTER GEAR TFR54 NKR</p>	 <p>8-94337444-PT(8943374440) 起动机磁吸(圆) STARTER MAGNETIC (ROUND) NHR NKR</p>	 <p>8-94450045-PT(8944500450) 起动机磁吸(方) MAGNET STARTER NHR NKR54.55</p>
 <p>8-94450046-PT(8944500460) 起动机磁吸开关总成 SWITCH ASM;MAGNET NHKR</p>	 <p>8-94167429-GC(8941674290) 起动机碳刷 CARBON BRUSH;STARTER NKR</p>	 <p>8-94156593-GC(8941565930) 发电机碳刷 CARBON BRUSH;GENERATOR NHR NKR</p>



 <p>fei men mugol</p> <p>8-94408399-TY(8944083990) 发电机真空泵(粗8齿) VACUUM PUMP;GENERATOR NHKR</p>	 <p>fei men mugol</p> <p>8-97598792-TY(8975987920) 发电机真空泵(16齿) VACUUM PUMP;GENERATOR NHKR</p>	 <p>fei men mugol</p> <p>8-94167410-GC(8941674100) 发电机调节器 3P REGULATOR GENERATOR NKR</p>
 <p>fei men mugol</p> <p>8-94205956-TM(8942059560) 发电机调节器 4P REGULATOR;ALTERNATOR 宝典</p>	 <p>fei men mugol</p> <p>5-87812645-PTT(5878126450) 发电机调节器(集成块)4P REGULATOR;ALTERNATOR 凯运J116</p>	 <p>fei men mugol</p> <p>8-82100318-PT(8821003180) 发电机转子 16齿 GENERATOR AMATURE NKR</p>
 <p>fei men mugol</p> <p>8-94167406-TY(8941674060) 发电机线圈 GENERATOR COIL NKR 4JB1</p>	 <p>fei men mugol</p> <p>8-94156585-NSKK(8941565850) 发电机轴承(前)6202 ALTERNATOR BEARING NHR NPR</p>	 <p>fei men mugol</p> <p>8-94223979-NSKK(8942239790) 发电机轴承(后)6303 ALTERNATOR BEARING NHR NPR</p>
 <p>fei men mugol</p> <p>8-94164663-GC(8941646630) 发电机支架(调整) GENERATOR SUPPORT NHR NKR 小</p>	 <p>fei men mugol</p> <p>8-94165177-PT(8941651770) 发电机进油管(两头铁) OIL INLET;ALTERNATOR 600PNKR</p>	 <p>fei men mugol</p> <p>8-94165178-PT(8941651780) 发电机真空泵胶管 VACUM PUMP HOSE;GEN 600PNKR55</p>
 <p>fei men mugol</p> <p>8-94110271-GC(8-941102710) 时规轴承 TIMING BEARING NHRNKR</p>	 <p>fei men mugol</p> <p>9-82720209-GC(9-827202090) 机油感应器 OIL TANK SENSOR NHR NPR</p>	 <p>fei men mugol</p> <p>1129200TAR-PT(1129200TAR) 高压油泵油管 NO.1 PIPE INJECTION TRANSIT凯运欧3</p>



fei menl mugol

1129300TAR-PT(1129300TAR)
高压油泵油管 NO.2
PIPE INJECTION
TRANSIT凯运欧3



1129400TAR-PT(1129400TAR)
高压油泵油管 NO.3
PIPE INJECTION
TRANSIT凯运欧3



1129500TAR-PT(1129500TAR)
高压油泵油管 NO.4
PIPE INJECTION
TRANSIT凯运欧3



1129600TAR-PT(1129600TAR)
高压油泵油管连接总管
INJECTION HEADER PIPE
TRANSIT凯运欧3



		
<p>1-82828555-PT(1-828285550) 里程表轴套 ODOMETER SLEEVE NKR57</p>	<p>8-9355655-JXX 变速箱总成 软轴 5M TRANSMISSION SHAFT ASM JMC NHR98 5M</p>	<p>8-97909660-JXX 变速箱总成 软轴2.75 MSB5M TRANSMISSION SHAFT ASM NKR55</p>
		
<p>8-97100489-JX(8-971004890) 飞轮壳 FLYWHEEL HOUSING NKR4JB1</p>	<p>8-97091558-JXX 变速箱一轴(28 36) PRIMARY SHAFT,TRANS NKR 4JB15M</p>	<p>8-94129526-JXX 变速箱副轴Z=51 COUNTER SHAFT TRANS NKR 4JB1 5M</p>
		
<p>8-97045932-CAO 变速箱二轴(粗齿)17 MAIN SHAFT TRANS NKR 5M</p>	<p>8-94316770-JX 同步器(1.2)40 42 SYNCHRONIZER NKR 4JB1</p>	<p>8-97231968-CA(8972319680) 离合器片 24X240MM DISC; CLUTCH NKR</p>
		
<p>8-97048745-CAO 同步器(3.4)27. 36 SYNCHRONIZER NKR</p>	<p>9-00096606-PT(9-000966060) 变速箱滚针(二轴前)K253324 TRANSMISSION NEEDLE NKR4JB1</p>	<p>8-94316920-JX 同步器(5倒)31 36 SYNCHRONIZER NKR 4JB1</p>
		
<p>8-94316768-JXX 变速齿二轴1档43.42 SPEED GEAR NKR</p>	<p>8-94316765-JX 变速齿二轴2档 34.42SPEED GEAR NKR 5M</p>	<p>8-94317761-JXX 变速齿二轴3档31.36 SPEED GEAR NKR</p>



		
<p>8-94315778-JXX 变速齿二轴5档25.36 SPEED GEAR NKR 5M</p>	<p>8-94317252-GZ 变速齿二轴倒档41.36 SPEED GEAR NKR</p>	<p>8-94340268-JXX 变速齿付轴五档53.25 SPEED GEAR NKR 4JB1</p>
		
<p>8-97036150-PT(8-970361500) 变速箱后盖 REAR COVER;TRANS NKR</p>	<p>8-94111905-GC(8941119050) 变速箱悬挂胶总成 TRANS SUSPENSION ASSY NKR</p>	<p>8-94340146-PT(8943401460) 变速箱操纵盖总成 COVER ASM : TRANS NHR98</p>
		
<p>8-94337176-PT(8943371760) 变速箱操纵盖总成 COVER ASM : TRANS NKR 4JB1</p>	<p>8-94440554-PT(8-944405540) 变速箱拨叉(1.2档) TRANSMISSION FORK NKR 4JB1</p>	<p>8-94440555-PT(8-944405550) 变速箱拨叉(3.4档) TRANSMISSION FORK NKR 4JB1</p>
		
<p>8-52454555-PT(8-524545550) 变速箱拨叉(5;R倒) TRANSMISSION FORK NKR4JB1</p>	<p>8-97074619-GC(8-970746190) 同步齿环(12)42齿 BAULK RING NKR 4JB1</p>	<p>8-94128775-GC(8-941287750) 同步齿环(34)36齿 BAULK RING NKR</p>
		
<p>8-94420299-GC(8-944202990) 变速箱凸圆 17齿 TRANSMISSION CONVEX CIRCLE NKR</p>	<p>8-97011346-GC(8-970113460) 变速箱凸圆24齿 TRANSMISSION CONVEX CIRCLE NKR4JB1</p>	<p>9-00090605-GC(9000906050) 变速箱轴承 6308 BEARING;TRANSMISSION NKR</p>



 <p>feimenl mugol</p>	 <p>feimenl mugol</p>	 <p>feimenl mugol</p>
<p>9-00090656-GC(9000906560) 变速箱轴承 63-32 BEARING;TRANSMISSION NKR 4JB1</p>	<p>5-09800062-GC(5098000620) 变速箱轴承 6207 BEARING;TRANSMISSION NKR</p>	<p>8-94477268-PT(8-944772680) 里程表被动齿(14) DRIVEN GEAR METER NKR 4JB1</p>
 <p>feimenl mugol</p>	 <p>feimenl mugol</p>	 <p>feimenl mugol</p>
<p>8-94477264-PT(8-944772640) 里程表被动齿(16) DRIVEN GEAR METER NKR4JB1</p>	<p>8-94477266-PT(8-944772660) 里程表主动齿(24齿) DRIVEN GEAR METER NKR 4JB1</p>	<p>8-94477267-PT(8-944772670) 里程表主动齿(17齿) DRIVEN GEAR METER NKR</p>
 <p>feimenl mugol</p>	 <p>feimenl mugol</p>	 <p>feimenl mugol</p>
<p>8-97080360-PT(8-970803600) 里程表轴套 ODOMETER SLEEVE NHKR</p>	<p>8-94125761-PT(8941257610) 飞轮总成240MM FLYWHEEL ASSY NHR NKR</p>	<p>8-94419602-PT(8944196020) 飞轮齿环 Z=108 FLYWHEEL RING 600PNKR</p>
 <p>feimenl mugol</p>	 <p>feimenl mugol</p>	 <p>feimenl mugol</p>
<p>1005060TV-PT(1005060TV0) 飞轮总成(增压)250MM FLYWHEEL ASSY TRA凯运</p>	<p>5-31220022-QY(5312200220) 离合器压板240MM CLUTCH PRESSURE PLATE NHR NKR</p>	<p>160110007-ZB(1601100070) 离合器压板250MM CLUTCH PRESSURE PLATE 凯运J116顺达欧2</p>
 <p>feimenl mugol</p>	 <p>feimenl mugol</p>	 <p>feimenl mugol</p>
<p>8-97011309-ZH(8970113090) 离合器片24X240MM DISC; CLUTCH NHR 6 6</p>	<p>CN1C157550AAA-CAO(CN1C157550) 离合器片24X250MM DISC; CLUTCH TRA凯运顺达欧2</p>	<p>5-31314001-9(5313140010) 离合器分离轴承 CLUTCH RELEASE BEARING NHR NKR</p>



		
<p>5-94313167-GC(5943131670) 离合器分离轴承座 CLUTCH RELEASE BEARING CARRIER NHR NKR</p>	<p>9-94328239-PT (9943282390) 离合器分离轴承连座 CLUTCH RELEASE BEARING SEAT 凯运J116欧2</p>	<p>5-94328239-PT (5943282390) 离合器分离轴承连座 CLUTCH RELEASE BEARING SEAT 凯运J116欧3</p>
		
<p>8-97039528-CAO(8970395280) 离合器拨叉 CLUTCH FORK NHR NKR</p>	<p>8-97019066-PT(8970190660) 离合器拨叉 CLUTCH FORK 凯运顺达N900欧3</p>	<p>8-97048567-CAO(8970485670) 离合器总泵 CLUTCH MASTER CYL NHKR</p>
		
<p>8-97212010-CA(8972120100) 离合器分泵 CLUTCH SLAVE CYL NHKR</p>	<p>8-94248703-PT(8942487030) 离合器分泵软管 HOSE;CLU SLAVE CYL NHR NKR</p>	<p>3502110080W 刹车分泵(后L) N943 N900</p>
		
<p>3502210080W 刹车分泵(后R前) N941 N900</p>	<p>5-94128141-JLL 刹车分泵(后R) BRAKE,SLAVE CYL RR R 凯运1030</p>	<p>5-94128143-JLL 刹车分泵(后L) BRAKE,SLAVE CYL FRT 50 凯运1030</p>
		
<p>5-94128162-JLL 刹车分泵(前R) BRAKE,SLAVE CYL FRT R 凯运1030</p>	<p>3407100A-KY(3407100A) 方向机助力泵非增压 BOOSTER PUMP;STEERING 凯运J116</p>	<p>340710005-KY(340710005) 方向机助力泵(增压) BOOSTER PUMP;STEERING 凯运J116N900宽</p>



		
<p>5-95454541-JX(5954545410) 方向机总成(液压) STEERING ASSY(hydraulic) 凯运J116</p>	<p>8-94429499-GC(8944294990) 方向机总成 STEERING ASSY NHR NKR</p>	<p>5-87830978-QZ(5878309780) 转向节修理包 REPAIR KITS;KNUCKLE NKR凯运</p>
		
<p>5-87831029-QZ(5878310290) 转向节修理包 NHR KUNCKLE,REP AIR KIT</p>	<p>8-94169410-PT (894169410) 转向节 L KNUCKLE;LH NHR</p>	<p>3001155A1 (8942488510) 转向节 L KNUCKLE;LH NKR 凯运</p>
		
<p>8-52520455-PT(852520455) 转向直臂 STEERING ARM;STRAIGHT NHR NKR</p>	<p>8-94362211-PT(894362211) 转向弯臂 STEERING ARM;CURVED NKR</p>	<p>8-94134458-PTH(8941344580) 方向机伸缩节 EXPANSION JOINT;STEERING 凯运J116 JMC</p>
		
<p>8-94134455-GC(8941344550) 方向机伸缩节 EXPENSION JOINT;STEERING NHR NKR</p>	<p>8-94271118-PT(8942711180) 方向机柱(上部) COLUMN;STEERING UP NHR NKR</p>	<p>8-97085131-PT(8970851310) 皮带(方向机助力泵)6325 BELT(STEERING PUMP) 600PNKR55</p>
		
<p>8-97852252-PT(8-978522520) 方向机油管(高压短) OIL PIMP.STEERING JMC 凯运J116</p>	<p>9-09924261-9(9099242610) 方向机油封(下) OIL SEAL;STEERING NHRNKR</p>	<p>5001030A(5001030A) 驾驶室翻转支架座 L CABIN BRACKET HOLDER,LH JMC NKR凯运凯锐窄</p>



		
<p>5001040A(5001040A) 驾驶室翻转支架座 R CABIN BRACKET HOLDER,RH NKR凯运凯锐窄</p>	<p>500105008(500105008) 驾驶室翻转杆 TORSION BAR;CAB NHR98凯运</p>	<p>8-94166613-J(8941666130) 驾驶室翻转支架胶 HOLDER RUBBER;CAB NKR</p>
		
<p>8-94210305-SY(8942103050) 刹车助力器 BRAKE BOOSTER NHR98</p>	<p>8-94249367-JL(8942493670) 刹车助力器 9 BRAKE BOOSTER NKR</p>	<p>8-94258510-PT(8942585100) 刹车助力器 8 BRAKE BOOSTER NHR</p>
		
<p>351010010-PT(3510100100) 刹车助力器 BRAKE BOOSTER N900凯锐凯运欧3</p>	<p>8-94121866-PT(8941218660) 三踏板(油门)110810002 THREE PEDAL(accelerator) 凯运J116</p>	<p>8-94121865-PT(8941218650) 三踏板(油门)1108100A THREE PEDAL(accelerator) NKR</p>
		
<p>8-94433993-PT(8944339930) 三踏板(刹车)3504100A THREE PEDAL(BRAKE) NKR</p>	<p>5-94163150-PT(5941631500) 三踏板(离合)160212606 THREE PEDAL(CLUTCH) JMC 凯运J116</p>	<p>110820020-PT(1108200200) 三踏板(油门)电感 THREE PEDAL(accelerator) 凯运宝典欧3</p>
		
<p>350810008(350810008) 手刹拉杆总成 HAND BRAKE LEVER ASSY NHR98凯运</p>	<p>8-94129705-PT(8941297050) 手刹拉杆总成 HAND BRAKE LEVER ASSY NHR NKR</p>	<p>8-94140444-QLL(8941404440) 传动轴(双排)(108CM) TRANSMISSION SHAFT NHKR</p>


















		
<p>8-94258888-PT (8942588880) 传动轴伸缩叉 TRANS.SHAFT FORK NHR NKR</p>	<p>8-38759855-BJ (8387598550) 传动轴伸缩叉总成 TRANS.SHAFT FORK ASSY NKR</p>	<p>8-97087078-PT (8970870780) 传动轴凸圆 YOKE;FLANGE NHR NKR</p>
		
<p>9-37300601-GC(9373006010) 传动轴十字头2979 CROSS JOINT;TRANS.SHAFT NHR NKR</p>	<p>8-97653660-CA0(8976536600) 避震机后 SHOCK ABSORBER RR NKR</p>	<p>9-51630665-CAO(9516306650) 避震机(前) SHOCK ABSORBER FRT NKR</p>
		
<p>8-94258522-PT(8942585220) 刹车鼓(前) BRAKE DRUM;FRT NHR</p>	<p>5-42315039-PT(5423150390) 刹车鼓(后) BRAKE DRUM;RR NHR</p>	<p>8-97034790-PT(8970347900) 刹车鼓(前) BRAKE DRUM;FRT NHR98</p>
		
<p>5-42315020-PT(5423150200) 刹车鼓(后)长单 BRAKE DRUM;RR NKR 2.75</p>	<p>8-94258525-PT(8942585250) 刹车鼓(前) BRAKE DRUM 凯运J116</p>	<p>5-42315040-PT(5423150400) 刹车鼓(后) BRAKE DRUM;RR 凯运J116</p>
		
<p>8-94246307-PT(8942463070) 前轮轴头(长单) FRONT HUB NKR 2.75</p>	<p>8-94246303-PT(8942463030) 前轮轴头 FRONT HUB NHR</p>	<p>9-42311067-PT(9423110670) 后轮轴头(6孔) REAR HUB NHR98NKR 2.75</p>



		
<p>8-94120080-PT(894120080) 后轮轴头 REAR HUB NHR</p>	<p>8-94378401-GC(8943784010) 手刹盘总成 HAND BRAKE DISC ASSY NHR NKR</p>	<p>5-46220001-PT(5462200010) 手刹皮 HAND BRAKE SHOES NKR</p>
		
<p>8-53485585-PT(8534855850) 手刹鼓修理包 REP KITS;HAND BRK DRUM 700P凯运</p>	<p>8-94378402-GC(8943784020) 手刹盘总成 HAND BRAKE DISC ASSY 凯运顺达凯锐欧3</p>	<p>8-89295792-ZD(8892957920) 手刹线(新江铃) HAND BRAKE CABLE NHR98</p>
		
<p>8-94110318-ZD(8941103180) 手刹线 L=290 HAND BRAKE CABLE NHR NKR</p>	<p>5-47411768-PT(5474117680) 刹车铁管(后)L BRAKE PIPE NKR</p>	<p>5-47411782-PT(5474117820) 刹车铁管(后左到右轮) BRAKE PIPE NHR NKR</p>
		
<p>9-00000000-PT(9000000000) 刹车墙板油管 OIL PIPE;BRAKE CHASSIS NKR</p>	<p>8-94150503-PT(8941505030) 刹车墙板(前) L BRAKE CHASSIS NKR57</p>	<p>8-94422599-PT(8944225990) 刹车墙板(前) L BRAKE CHASSIS NHR</p>
		
<p>5-94116196-JX(5941161960) 钢圈(无挡圈) 15 STEEL RING NHR98</p>	<p>8-93856535-PT(8938565350) 钢圈(无挡圈)五孔 15 STEEL RING NKR57真空</p>	<p>8-97001116-PT(8970011160) 钢圈(无挡圈) 16 STEEL RING 凯运凯锐</p>



 <p>feimenl mugol</p> <p>8-97001117-PT(8970011170) 钢圈 16 STEEL RING 凯运J116</p>	 <p>feimenl mugol</p> <p>8-94258865-TZ(8942588650) 备胎架 CARRIER;SPARE WHEEL NHR</p>	 <p>feimenl mugol</p> <p>8-94380175-PT 备胎架(长单) CARRIER;SPARE WHEEL NKR57</p>
 <p>feimenl mugol</p> <p>8-94217642-PT(8942176420) 半轴 23齿=76.5CM AXLE SHAFT NKR6孔</p>	 <p>feimenl mugol</p> <p>8-97083094-PT(8970830940) 半轴 23X69CM AXLE SHAFT NHR</p>	 <p>feimenl mugol</p> <p>8-97029901-PT(8970299010) 半轴(6孔) AXLE SHAFT NKR 2.75</p>
 <p>feimenl mugol</p> <p>8-97083902-PT(8970839020) 半轴(6孔)=78.5 AXLE SHAFT NHR98 2.75</p>	 <p>feimenl mugol</p> <p>8-94116276-GC(894116276) 直拉杆总成 DRAG LINK ASSY NKR L=103.7</p>	 <p>feimenl mugol</p> <p>8-94254870-GC(894254870) 横拉杆总成 TIE ROD ASSY NHR NKR</p>
 <p>feimenl mugol</p> <p>5-81113954-PT(5-811139540) 轮胎套筒(单排) TIRE SLEEVE NKR57</p>	 <p>feimenl mugol</p> <p>3900020A(3900020A) 加力杆 BOOSTER ROD NKR77凯运</p>	 <p>feimenl mugol</p> <p>3913011A(3913011A) 备胎架摇手 TIRE CARRIER;HANDLE NKR77凯运</p>
 <p>feimenl mugol</p> <p>240090104(240090104) 后桥壳螺母 NUT;BEARING,RR HUB 凯运J116顺达欧3</p>	 <p>feimenl mugol</p> <p>9-09853214-GC(9-098532140) 后桥壳螺母垫圈 WASHER;LK.BRG NKR</p>	 <p>feimenl mugol</p> <p>8-94178278-GC(8-941782780) 半轴螺母(金色) NUT AXLE SHAFT NHR</p>



		
<p>9-09853214-PT(9-098532140) 后桥壳螺母 NUT;BEARING,RR HUB NKR</p>	<p>8-97136086-PT(8-971360860) 刹车鼓修理包(后) BRK DRUM REPAIR KITS RR 凯运J116</p>	<p>3502120080W-LTK(35021200800) 刹车皮(粘) BRAKE SHOES 凯锐N900宽</p>
		
<p>5-87870023-LTK (5878700230) 刹车皮426 BRAKE SHOES JMC 16 凯运J116</p>	<p>8-94134645-LTK(8941346450) 刹车皮 AK434 BRAKE SHOES NHR</p>	<p>8-94441330-JLL(8944413300) 刹车总泵1.1-8 BRAKE MASTER CYLINDER JMC 凯运J116 NPR</p>
		
<p>8-94441331-CAO(8944413310) 刹车总泵1.1-16 BRAKE MASTER CYLINDER NKR</p>	<p>8-94441332-CK(8944413320) 刹车总泵 1 BRAKE MASTER CYLINDER NHR 1</p>	<p>8-94111587-CK(8941115870) 刹车分配阀 BRAKE DISTRIBUTING VALVE NHR NKR</p>
		
<p>8-94110309-SC(8941103090) 刹车真空储气箱(弯管) EXPANSION BOX;BRK VACUUM NHR NKR</p>	<p>8-94157866-JL(8941578660) 刹车总泵修理包 REP KITS;BRK MASTER CYL NKR</p>	<p>8-94157865-JLL(8941578650) 刹车总泵修理包 REP KITS;BRK MASTER CYL NHR</p>
		
<p>9-00032206-GC(9000322060) 前轮轴承(外)32206 FRONT WHEEL BEARING (OUTER) NHR凯运后轮单胎</p>	<p>8-94248078-GC(8942480780) 前轮轴承(内) 32208 FRONT WHEEL BEARING (INNER) NHR凯运后轮单胎</p>	<p>9-00032209-GC(9000322090) 后轮轴承32209 REAR WHEEL BEARING NHR凯运后轮单胎</p>



 <p>9-00093172-CHM(9000931720) 前轮轴承(外)32207 FRONT WHEEL BEARING (OUTER) 700P NKR</p>	 <p>9-00093149-CHM(8942480881) 前轮轴承(内)32210 FRONT WHEEL BEARING (INNER) NKR 凯运</p>	 <p>9-00093081-GC(9000930810) 后轮轴承(内)28985 REAR WHEEL BEARING(INNER) NKR</p>
 <p>9-00093082-GC(9000930820) 后轮轴承(外)28584 REAR WHEEL BEARING (OUTER) NKR</p>	 <p>28680-22-CHM(9000936070) 后轮轴承(外)28680 REAR WHEEL BEARING (OUTER) J116 N900 4HG14HF1</p>	 <p>29586-22-CHM(9000936240) 后轮轴承(内)29586 REAR WHEEL BEARING(INNER) 4HK1 4HF1凯运J116</p>
 <p>8-94248116-CAO(8942481160) 前轮油封63808 OIL SEAL;FRT HU NHR 凯运后轮单胎</p>	 <p>8-94248117-9(8942481170) 前轮油封73908 OIL SEAL;FRT NKR</p>	 <p>5-09625092-CAO(5096250920) 后轮油封(内)406010 OIL SEAL;RR HU NHR凯运后轮单胎</p>
 <p>9-09724022-CAO(9097240220) 后轮油封(外)52727.5 OIL SEAL;RR HU NHR TFR</p>	 <p>8-94336314-9(8943363140) 后轮油封(内)761021222 OIL SEAL;RR HU NKR</p>	 <p>8-94336315-9(8943363150) 后轮油封(外) OIL SEAL;RR HU NKR</p>
 <p>8-94338902-GC 差速器总成 (7.43) DIFFERENTIAL ASM NKR57</p>	 <p>8-97987235-PT 差速器壳 HOUSING DIFFERENTIAL NKR57</p>	 <p>9-41200614-PT(9412006140) 盘角齿 39;7 SPIRAL BEVEL GEAR 39;7 NKR</p>



 <p>9-85102133-PT(9851021330) 盘角齿 43;7 SPIRAL BEVEL GEAR 43;7 NKR57</p>	 <p>5-41521008-PT 差速器十字轴 23整套 GEAR;AXLE SHAFT NKR</p>	 <p>2403106A2(2403106A2) 半轴齿轮(内23齿)外20 GEAR;AXLE SHAFT NKR5755凯运</p>
 <p>9-84212152-PT 差速器行星齿轮(10齿) DIFFERENTIAL PINION GEAR NKR</p>	 <p>2403104A2(2403104A2) 差速器十字轴 DIFFERENTIAL SPIDER NKR5755凯运凯锐</p>	 <p>2403107A2(2403107A2) 半轴齿轮垫片(铜) GASKET,AXLE SHAFT GEAR NKR5755凯运凯锐</p>
 <p>8-94408083-9(8944080830) 差速器油封 OIL SEAL;DIFF NKR57</p>	 <p>8-94408084-9 (8944080840) 差速器油封45781118.5 OIL SEAL;DIFF 4JB1 NKR</p>	 <p>8-62915651-GC(8629156510) 差速器轴承 30210 DIFF BEARING NKR</p>
 <p>9-24110244-GC(9241102440) 差速器轴承(76-32B) BEARING;TRANSMISSION NKR 前 0608</p>	 <p>32308-GC(323080) 差速器轴承 32308 DIFF BEARING NHKR 后</p>	 <p>9-24110244-GC (9241102440) 差速器轴承 (前) 0608 DIFF BEARING (FRT) NKR</p>
 <p>9-00032211-CHM (9000322110) 差速器轴承32211 DIFF BEARING NKR 用2</p>	 <p>8-94646205-CHM(8946462050) 差速器轴承NJ-205 DIFF BEARING NKR57</p>	 <p>8-92594639-NT 钢板总成 (付钢板) NKR94 6片 LEAF SPRING ASM</p>



 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei men mugol</p>
<p>8-92594640-NT 钢板总成 (后) 1050 NKR57 LEAF SPRING ASM</p>	<p>8-92594641-NT 钢板总成 (后) NKR94 5片 LEAF SPRING ASM</p>	<p>8-94150265-GC(8941502650) 钢板缓冲胶(前) RUBBER;LEAF S NHR NKR</p>
 <p>fei men mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-94142044-PT(8941420440) 钢板缓冲胶(后) RUBBER;LEAF S NKR</p>	<p>8-97254387-JZ(8972543870) 副钢板缓冲胶 RUBBER;HELPER SPRING NKR57长单</p>	<p>8-94130354-CAO(8941303540) 钢板衬套(后-前)小孔 16 BUSHING; LEAF S NKR</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-94118588-GC(8971846991) 钢板衬套(后之后) BUSHING; LEAF S 700P4HK1NKR94 小</p>	<p>8-97227996-CAO(8972279960) 钢板衬套(后-前)大孔 18 BUSHING; LEAF S 700P4HK1NKR94</p>	<p>8-94113314-CAO(8941133140) 钢板胶套(前)短 BUSHING; LEAF S NHRNKR凯运</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-94113323-CAO(8941133230) 钢板胶套(后)长 BUSHING; LEAF S NHRNKR凯运</p>	<p>3-82825218-PT(3828252180))钢板吊耳销(后之前) 18 AUTO SHACKLE NKR57 长单</p>	<p>8-94113322-PT (894113322) 钢板吊耳销(后之前) 16 AUTO SHACKLE NKR</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-94117900-PT (8941179000) 钢板吊耳销(前之前) AUTO SHACKLE NKR 2</p>	<p>9-51361600-GC(9513616000) 钢板吊耳(前之后) AUTO SHACKLE NHR NKR</p>	<p>1-82855589-PT(8941185120) 钢板吊耳(后之后) 18 AUTO SHACKLE NKR</p>



 <p>feimenl mugol</p> <p>1-82855587-PT(8970339661) 钢板吊耳(后之后) 16 AUTO SHACKLE NKR57 长单</p>	 <p>feimen mugol</p> <p>8-94249418-PT(894249418) 钢板U形螺丝(前) U-SHAPE BOLT FRT NHR</p>	 <p>feimenl mugol</p> <p>1-55555327-PT(155555327) 钢板U形螺丝(前)加长13CM U-SHAPE BOLT FRT NKR</p>
 <p>feimenl mugol</p> <p>1-55555328-PT(155555328) 钢板U形螺丝(前)加长16CM U-SHAPE BOLT FRT NKR单排</p>	 <p>feimenl mugol</p> <p>8-91532555-PT(891532555))钢板U形螺丝(后)22CM U-SHAPE BOLT RR NHR</p>	 <p>feimenl mugol</p> <p>1-85555555-PT(185555555) 钢板U形螺丝(后)27CM U-SHAPE BOLT RR NKR</p>
 <p>feimenl mugol</p> <p>1-12051371-PT(112051371) 钢板U形螺丝(后)31CM U-SHAPE BOLT RR NKR</p>	 <p>feimenl mugol</p> <p>8-97063464-ZJ(8970634640) 排气管(网)前 EXHAUST PIPE FRT NPRNKR6977</p>	 <p>feimenl mugol</p> <p>8-97100010-ZJ(8971000100) 排气管(网)前 EXHAUST PIPE FRT NKR</p>
 <p>feimenl mugol</p> <p>8-94100156-PT(8941001560) 排气管吊胶(单排) RUBBER CUSHION;EXHAUST PIPE NKR57</p>	 <p>feimenl mugol</p> <p>5-94100156-PT(5941001560) 排气管吊胶 RUBBER CUSHION;EXHAUST PIPE NHR NKR</p>	 <p>feimenl mugol</p> <p>8-97073999-YG(8970739990) 变档杆上部 UPPER;SHIFT LEVER NHR98</p>
 <p>feimenl mugol</p> <p>8-97073999-PT 变档杆上部(98新江铃)SHIFT LEVER,UP JMC98</p>	 <p>feimenl mugol</p> <p>8-54242545-PT(8542425450) 变档线支架 SUPPORT;SHIFTLEVER CABLE NHR98</p>	 <p>feimenl mugol</p> <p>8-54242548-RA(8542425480) 变档线支架 SUPPORT;SHIFTLEVER CABLE 凯运J116</p>



		
<p>8-92875207-PT(8928752070) 变档杆手球 HAND BALL;SHIFT LEVER NHR98</p>	<p>9-55812895-PT(9558128950) 变档杆防尘套铁圈 RING;DUST COVER,SHIFTLEVER NHR98</p>	<p>8-94178868-RA(8941788680) 变档杆球头 L BALL JOINT;SHIFTLEVER NHR NPR</p>
		
<p>1-09760119-RA(1097601190) 变档杆球头 R BALL JOINT;SHIFTLEVER NHR NPR</p>	<p>8-82485255-PT(8824852550) 变档杆防尘套 DUST COVER;SHIFTLEVER 凯运J116</p>	<p>1-82485255-GC(1824852550) 变档杆防尘套 DUST COVER;SHIFTLEVER NHR98</p>
		
<p>170307004(170307004) 变档杆护罩 COVER;SHIFTLEVER 凯锐N900宽体</p>	<p>1-00000220-PT(1000002200) 变档杆护罩 COVER;SHIFTLEVER 凯运J116</p>	<p>9-55181472-GC(9551814720) 变档线(无球头)L=290 CABLE;SHIFTLEVER NHR98</p>
		
<p>3-82744555-GC(3827445550) 变档线(有球头)L=277 CABLE;SHIFTLEVER NHR98</p>		



 <p>N900-37721001-GC(N900377210010) 大灯总成 L HEAD LAMP ASM L 凯锐N900 12V</p>	 <p>8-97013008-LL(371110006) 大灯总成 L HEAD LAMP ASM L 凯运J116</p>	 <p>8-97010000-GC(8970100000) 大灯总成 L(白) HEAD LAMP ASM L NHR98</p>
 <p>1-35000423-JL(1350004230) 前转向灯总成 L CORNER LAMP L 凯运J116</p>	 <p>8-94257412-LS(8942574120) 前转向灯总成 L CORNER LAMP L NHR NPR</p>	 <p>8-94178619-JL(8941786190) 尾灯总成 L REAR LAMP LH NHR NKR</p>
 <p>0-94178916-JL(941789160) 尾灯总成 L REAR LAMP LH 凯运J116/N900</p>	 <p>8-97852249-GCB(8978522490) 中网(白) GRILLE 凯锐N900(窄体)</p>	 <p>8-94145336-PTB(8941453360) 中网护角(白)L ANGLE BEAD;GRILLE NHR NPR</p>
 <p>8-97100124-PT(8971001240) 铁包角(L) IRON WRAP ANGLE 凯运J116</p>	 <p>8-97416850-GCL(8974168500) 中网护角(蓝)L ANGLE BEAD;GRILLE 凯锐N900</p>	 <p>530003190-GC(5300031900) 铁包角(L) IRON WRAP ANGLE 凯锐N900</p>
 <p>5-97080817-PT(5970808170) 保险杠支架 LH BRACKET;BUMPER 凯运J116</p>	 <p>8-97444222-GC(8974442220) 保险杠支架 LH BRACKET;BUMPER 凯锐N900</p>	 <p>N900-370000-TZ(N9003700000) 保险杠(黑) 不带支架 BUMPER 凯锐N900</p>



<p>8-94116371-GC "保险杠(黑)" BUMPER JMC98/JX1030</p>	<p>8-97808709-LL "保险杠(黑)" BUMPER JMC凯运JX1041</p>	<p>8-97808790-LL "保险杠(白)" BUMPER JMC凯运JX1041</p>
<p>8-95778652-LL "中网(白)" BUMPER JMC凯运JX1041</p>	<p>5-98778652-LL "中网(蓝)" GRILLE JMC凯运JX1041</p>	<p>8-97000110-PTB "中网(白)JMC" JMC98/JX1030</p>
<p>5-97000110-GC "中网(蓝)JMC" GRILLE JMC98/JX1030</p>	<p>8-95385513-GCB "中网(白)ISUZU" GRILLE JMC98/JX1030</p>	<p>8-94144157-PTB "中网护角(白)R" GRILLE EXTENTION R JMC98/JX1030</p>
<p>5-94144158-PT "中网护角(蓝)L" GRILLE EXTENTION L JMC98/JX1030</p>	<p>8-97455680-PT 挡风罩 白L=140.5 WINDSHIELD JMC凯运JX1041</p>	<p>8-94240020-PT 驾驶室空壳(白) CABIN JMC凯运JX1041</p>
<p>8-90000162-PTT "车门空壳(前)R" DOOR (FRT) R JMC凯运JX1041</p>	<p>8-94260343-GC "车门空壳(前)R" DOOR (FRT) R JMC98/JX1030</p>	<p>9-94267031-PT 前门框 R DOOR FRAME R JMC凯运JX1041</p>



 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-26854584-GC "车门空壳(后L)" DOOR RR L JMC98/JX1030</p>	<p>8-97100112-PT "前围护板" COVER BOARD JMC凯运JX1041</p>	<p>8-94265236-PT "前围护板" COVER BOARD JMC98/JX1030</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-94270077-PT 仪表台框架 FRAME DASHBOARD JMC凯运JX1041</p>	<p>8-54270006-LL 仪表台塑料件(兰) PLASTIC DASHBOARD JMC98/JX1030</p>	<p>8-97987389-LL 仪表台塑料件 PLASTIC DASHBOARD JMC凯运JX1041</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-97112411-PT 仪表总成(双表电感)液 METER ASSEMBLY JMC凯运JX1041</p>	<p>5-94270102-PT 工具箱(大) TOOL-CASE(big) JMC凯运JX1041</p>	<p>5-94270103-PT 工具箱(小) TOOL-CASE(small) JMC凯运JX1041</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-97927523-PT 组合开关 COMODOS NV JMC凯运JX1041</p>	<p>8-97030514 组合开关(新江铃)单排 COMODOS NV JX1030</p>	<p>8-00007120-PT 方向盘 VOLON JMC凯运JX1041</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>340310006A 方向机柱总成 STEERING COLUMN ASM JMC凯运JX1041</p>	<p>1-00016620-PT 方向机护罩(下) COVER STEERING (DOWN) JMC凯运JX1041</p>	<p>1-00001200-PT 方向机护罩(上) COVER STEERING (UP) JMC凯运JX1041</p>



 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-94276142-PT 驾驶室沙发(司机座垫) CAB SOFA</p>	<p>8-94276143-PT 驾驶室沙发(司机靠) CAB SOFA</p>	<p>0-94262245-LL "倒车镜" BACKING MIRROR JMC凯运JX1041</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-97032029-GC "倒车镜" BACKING MIRROR JMC98/JX1030</p>	<p>0-94262526-LL "照地镜" MIRROR JMC凯运JX1041</p>	<p>8-97032031-GC "照地镜1765" MIRROR JMC98/JX1030</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>1-35000420-PT "倒车镜支架 R" BRACKET;BACK MIRROR R JMC凯运JX1041</p>	<p>1-35000421-PT "倒车镜支架 L" BRACKET;BACK MIRROR L JMC凯运JX1041</p>	<p>8-94272757-ZH "倒车镜支架 L(框式)" BRACKET L JMC98/JX1030</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>8-94272838-PT "倒车镜支架 R(长)" BRACKET R JMC98/JX1030</p>	<p>8-90000132-GC 脚踏板胶 LH RUBBER;FOOT PEDAL LH JMC凯运JX1041</p>	<p>620210131 车门内饰板(后)L DOOR TRIM RR L JMC凯运JX1041</p>
 <p>fei menl mugol</p>	 <p>fei menl mugol</p>	 <p>fei menl mugol</p>
<p>610211030 车门内饰板(前L) DOOR TRIM FRT L JMC凯运JX1041</p>	<p>8-97100122-PT 车门内饰板(前L) DOOR TRIM FRT L JMC凯运JX1041</p>	<p>8-97114131-RA 车门升降器(前)L WINDOW REGULATOR FRT L JMC凯运JX1041</p>



<p>8-53265052-PT 开关(电动)前L SWITCH FRT L JMC凯运JX1041</p>	<p>8-53265051-PT 开关(电动)前R SWITCH FRT R JMC凯运JX1041</p>	<p>8-95548412-PT "车门外拉手 LH" HANDLE;OUTTER LH JMC凯运JX1041</p>
<p>8-94476111-P 车门内拉手 L DOOR HANDLE INNER L JMC凯运JX1041</p>	<p>1-00001410-PT 车门内拉手(合)桃木 L DOOR HANDLE INNER L JMC凯运JX1041</p>	<p>1-00001412-PT 车门内拉手合(桃)前L HANDLE;INNER FRT L JMC凯运JX1041</p>
<p>1-00001413-PT 车门内拉手合(桃)后L HANDLE ;INNER RR L JMC凯运JX1041</p>	<p>8-94415150-PT "密封条(前挡)" SEAL STRIP JMC98/JX1030</p>	<p>8-94415151-PT "密封条(前挡)" SEAL STRIP JMC凯运JX1041</p>
<p>8-97923792-PT 密封条(泥槽)前 SEAL STRIP JMC凯运JX1041</p>	<p>8-90259223-PT 密封条(前门)L SEAL STRIP JX1030/JX1041</p>	<p>8-90000320-PT "大灯下饰条 L" PANEL L JMC凯运JX1041</p>
<p>8-94271060-GC "车门玻璃压条(前R)外" WEATHERSTRIP FRT R JMC98/JX1030</p>	<p>8-94271103-GC "车门玻璃压条(后外)" WEATHERSTRIP RR JMC98/JX1030</p>	<p>8-94271338-PT "车门玻璃压条(内)" WEATHERSTRIP INNER JMC98/JX1030</p>



		
<p>8-97852161-PT "车门玻璃压条(前L)内" WEATHERSTRIP INNER JMC凯运JX1041</p>	<p>8-97852163-PT "车门玻璃压条(前L)外" WEATHERSTRIP FRT L JMC凯运JX1041</p>	<p>1-00002211-PT "标志(车门)L" DECAL JMC凯运JX1041</p>
		
<p>110820020-PT 三踏板(油门)电感 FOOTSTEP JMC凯运JX1041/EURO3</p>	<p>5-94163150-PT 三踏板(离合) FOOTSTEP JMC凯运JX1041</p>	<p>8-94121866-PT 三踏板(油门) FOOTSTEP JMC凯运JX1041</p>
		
<p>8-94433994-PT 三踏板(刹车) FOOTSTEP(BRK) JMC凯运JX1041</p>	<p>8-97073999-PT 变档杆上部(98新江铃) SHIFT LEVER UP JX1030/JX1041</p>	<p>8-97073999-RA 变档杆上部(98新江铃) SHIFT LEVER UP JX1030/JX1041</p>
		
<p>8-82485255-PT 变档杆防尘套 DUST COVER;SHIFT LEVER JMC凯运JX1041</p>	<p>1-82485255-GC 变档杆防尘套 DUST COVER;SHIFT LEVER JX1030</p>	<p>8-97124767-CAO 变档线(无球头) SHIFT LEVER CABLE(WITHOUT BALL JOINT) JMC凯运JX1041</p>
		
<p>8-97124766-CAO 变档线(有球头) SHIFT LEVER CABLE(WITH BALL JOINT) JMC凯运JX1041</p>	<p>9-55212241-PT 变档杆球头 BALL JOINT;STICKSHIFT JX1030</p>	<p>8-95458255-PT 开关(危险灯) 运霸 SWITCH JMC凯运JX1041</p>



8-97105453-GC
继电器(闪光) 12V
POWER RELAY
JX1030



8-94235627-PTT
继电器(充电)JQ103A
POWER RELAY
JX1030



8-94218497-GC
RELAIT 继电器(变光)5P 12V
POWER RELAY
JX1030



8-94235627-GC
继电器(充电)
POWER RELAY
JX1030



8-94112911-GC
继电器(灯光)
POWER RELAY
JX1030



8-94128856-GC
继电器(起动力)
POWER RELAY
JX1030



8-94248161-GC
继电器(预热)12V
POWER RELAY
JX1030



8-97011200-PT
雨刮马达 带板
WIPER MOTOR
JMC凯运JX1041



8-94121810-WL
雨刮马达 带板
WIPER MOTOR
JX1030



8-94151070-PT
洗涤壶总成
WINDSHIELD WASHER
JX1030



8-98100001-PT
喷水马达
MOTOR;WATER SPRAY
JX1030/JX1041



1-00000208-PTH
喷水嘴(带水管)
WATER JET
JMC凯运JX1041



1-00000206-PT
雨刮臂
WIPER ARM
JMC凯运JX1041





1-00000226-PT
雨刮片=50CM
WIPER BLADES
JMC凯运JX1041



8-97890437-XJL
手刹拉杆总成
HAND BRAKE LEVER
JX1030/JX1041



		
<p>8-89295792-ZD 手刹线(新江铃) CABLE FREIN A MEIN JX1030</p>	<p>8-94316190-GCB 油箱感应器(带报警) OIL TANK SENSOR JX1030</p>	<p>8-94160028-GC 油箱盖(带锁) CAP;OIL TANK JX1030</p>
		
<p>8-94271008-GC "车门锁块 R" LOCK ASM R JX1030</p>	<p>8-94332441-G 全车锁 DOOR LOCK ASM JX1030</p>	<p>8-97987359-PT 全车锁 DOOR LOCK ASM JMC凯运JX1041</p>
		
<p>8-97975927-PT 鼓风机总成 凯运 BLOWER ASM JMC凯运JX1041</p>	<p>8-97975925-PT 暖风机总成 凯运 FAN HEATER ASM JMC凯运JX1041</p>	<p>1-00001233-PT 蒸发器总成 EVAPORATOR ASM JMC凯运JX1041</p>
		
<p>8-94110026-PT 刹车油壶 OILCAN BRK JMC凯运JX1041</p>	<p>8-97173210-GC(8971732100) 空气格(FA1123) AIR FILTER NHR</p>	<p>8-94156052-G(8941560520) 空气格(FA1170) AIR FILTER NPR</p>
		
<p>8-85282525-PT (8852825250) 继电器盒(大梁) RELAY CASE NHR NKR.</p>	<p>1-00004411-PT(1-000044110) 车门外拉手合(前) LH DOOR HANDLE OUTER FRT L 凯运J116</p>	<p>8-94260327-GC(8942603270) 车门铰链(前) DOOR HINGE NHR NKR</p>